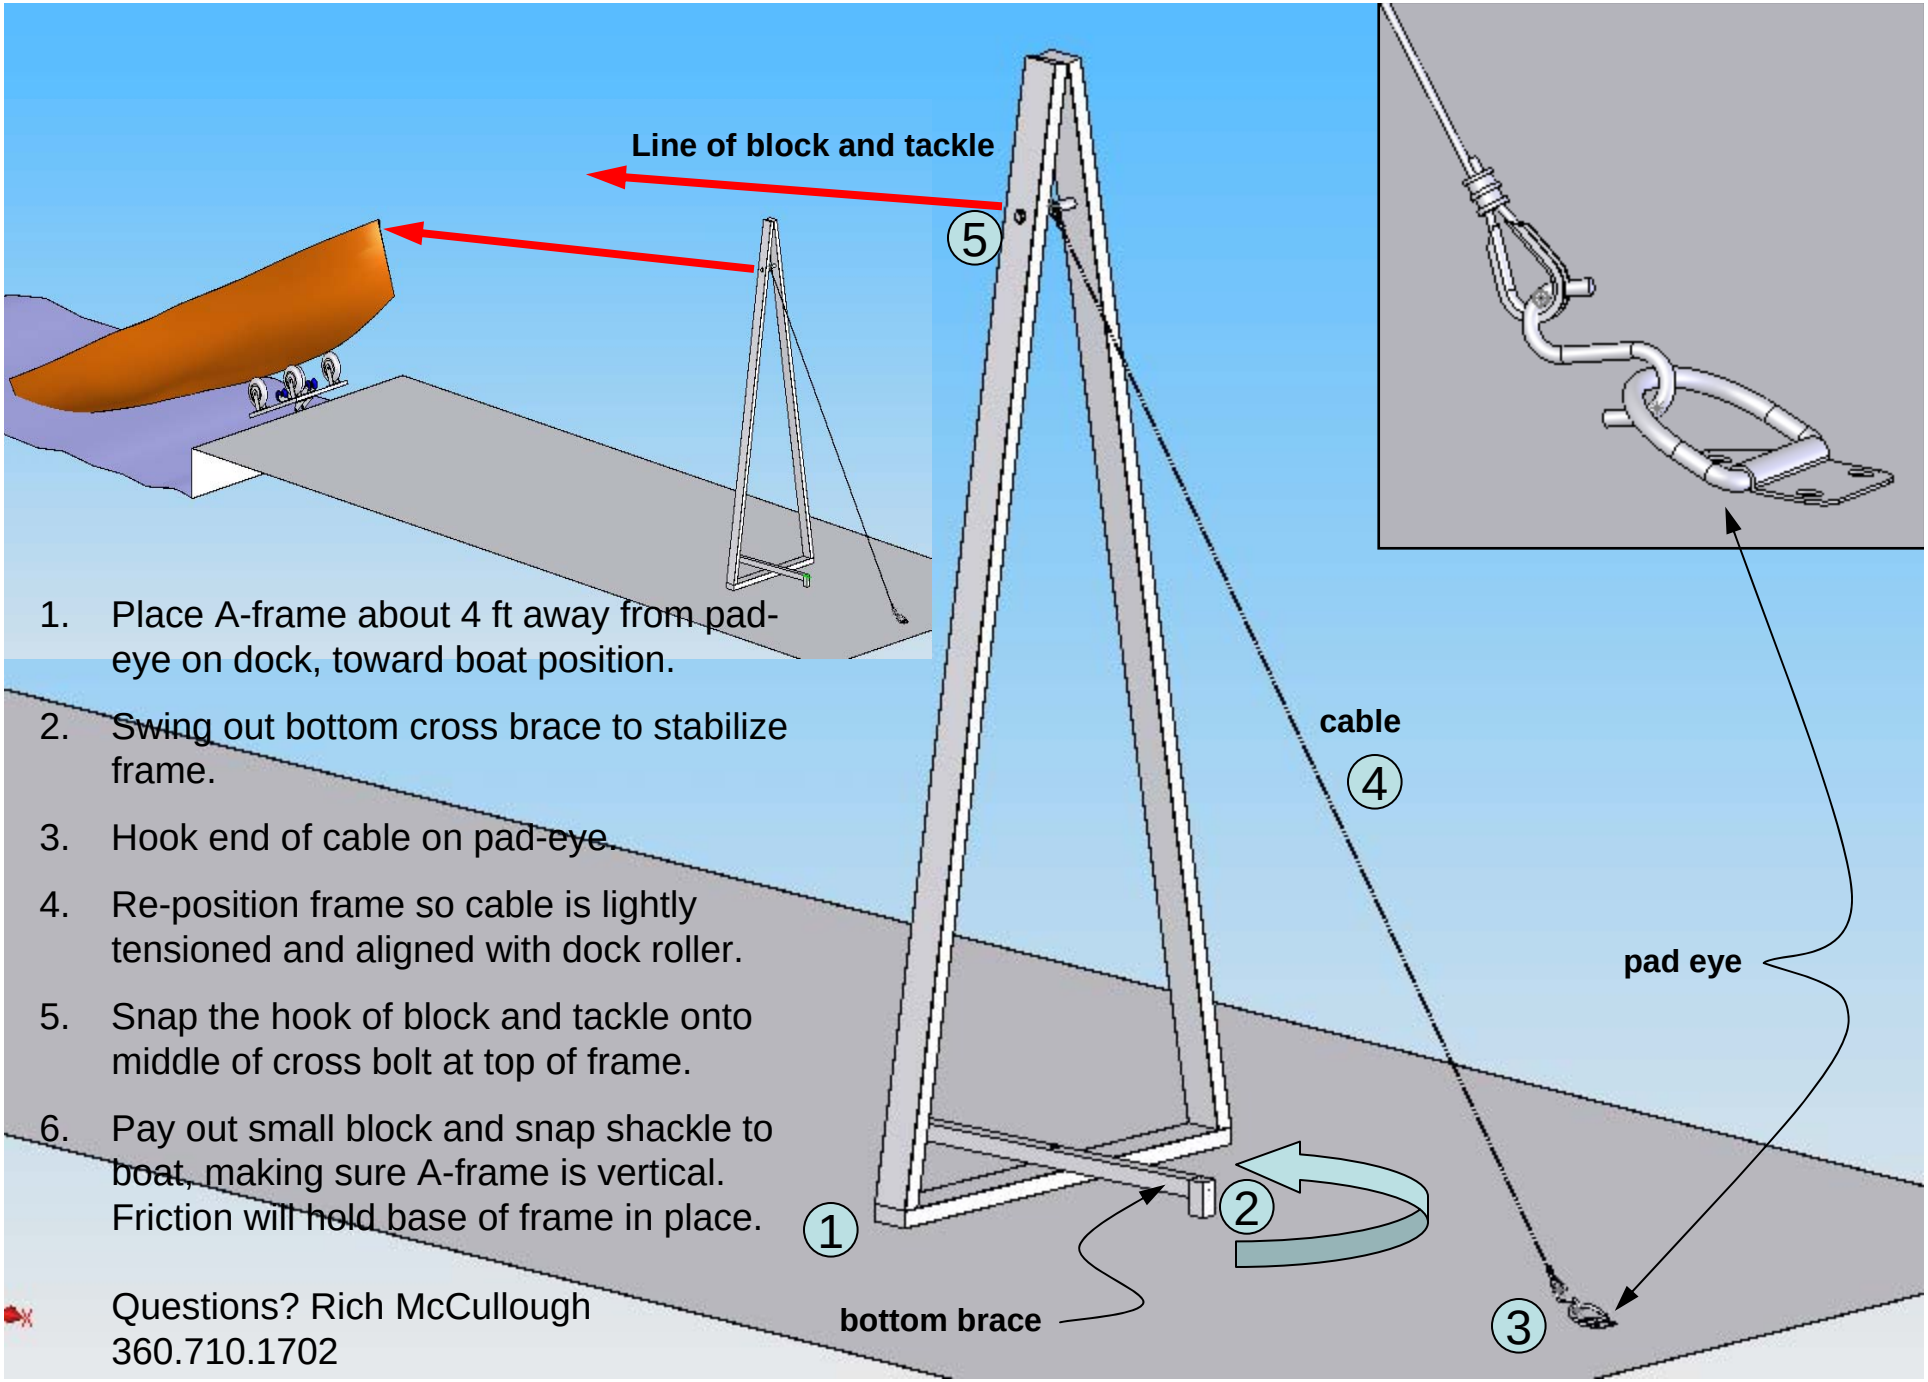

1. Place A-frame about 4 ft away from pad-eye on dock, toward boat position.
2. Swing out bottom cross brace to stabilize frame.
3. Hook end of cable on pad-eye.
4. Re-position frame so cable is lightly tensioned and aligned with dock roller.
5. Snap the hook of block and tackle onto middle of cross bolt at top of frame.
6. Pay out small block and snap shackle to boat, making sure A-frame is vertical. Friction will hold base of frame in place.

Questions? Rich McCullough
360.710.1702